

# QUANTUM

COMMUNICATIONS SOLUTIONS

Welcome to Quantum Communications Solutions India's leading distributor, wholesaler, exporter, importer, and manufacturer of wireless radio intercommunication equipment. We are the leading supplier of Motorola walkie-talkies, Sanchar walkie-talkies, ICOM walkie-talkies, and PCOM walkie-talkies in India.

**Get Best Price**



**Quantum**  
Communications Solutions



QUANTUM COMMUNICATIONS SOLUTIONS  
3/93, LALITA PARK, LAXMI NAGAR, DELHI-92  
QUANTUMCOM123@GMAIL.COM  
+91 - 9999075889  
GST: 07AZWPM5264F1Z4



**SmarTrunk II™  
Compatible**

## INSTRUCTION MANUAL

VHF TRANSCEIVER

**IC-F30GT/GS**

UHF TRANSCEIVER

**IC-F40GT/GS**

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Icom Inc.**



---

## SAFETY TRAINING INFORMATION



Your Icom radio generates RF electromagnetic energy during transmit mode. This radio is designed for and classified as “Occupational Use Only”, meaning it must be used only during the course of employment by individuals aware of the hazards, and the ways to minimize such hazards. This radio is **NOT** intended for use by the “General Population” in an uncontrolled environment.

This radio has been tested and complies with the FCC RF exposure limits for “Occupational Use Only.” In addition, your Icom radio complies with the following Standards and Guidelines with regard to RF energy and electromagnetic energy levels and evaluation of such levels for exposure to humans:

- FCC OET Bulletin 65 Edition 97-01 Supplement C, Evaluating Compliance with FCC Guidelines for Human Exposure to Radio Frequency Electromagnetic Fields.
- American National Standards Institute (C95.1–1992), IEEE Standard for Safety Levels with Respect to Human Exposure to Radio Frequency Electromagnetic Fields, 3 kHz to 300 GHz.
- American National Standards Institute (C95.3–1992), IEEE Recommended Practice for the Measurement of Potentially Hazardous Electromagnetic Fields— RF and Microwave.



**To ensure that your exposure to RF electromagnetic energy is within the FCC allowable limits for occupational use, always adhere to the following guidelines:**

- **DO NOT** operate the radio without a proper antenna attached, as this may damage the radio and may also cause you to exceed FCC RF exposure limits. A proper antenna is the antenna supplied with

---

this radio by the manufacturer or an antenna specifically authorized by the manufacturer for use with this radio.

- **DO NOT** transmit for more than 50% of total radio use time (“50% duty cycle”). Transmitting more than 50% of the time can cause FCC RF exposure compliance requirements to be exceeded. The radio is transmitting when the “TX indicator” lights red. You can cause the radio to transmit by pressing the “PTT” switch.
- **ALWAYS use** Icom authorized accessories (antennas, batteries, belt clips, speaker/mics, etc). Use of unauthorized accessories can cause the FCC RF exposure compliance requirements to be exceeded.
- **ALWAYS keep** the antenna at least 2.5 cm (1 inch) away from the body when transmitting and only use the Icom belt-clips which listed in page 25 when attaching the radio to your belt, etc., to ensure FCC RF exposure compliance requirements are not exceeded. To provide the recipients of your transmission the best sound quality, hold the antenna at least 5 cm (2 inches) from mouth, and slightly off to one side.

The information listed above provides the user with the information needed to make him or her aware of RF exposure, and what to do to assure that this radio operates within the FCC RF exposure limits of this radio.

## **Electromagnetic Interference/Compatibility**

During transmissions, your Icom radio generates RF energy that can possibly cause interference with other devices or systems. To avoid such interference, turn off the radio in areas where signs are posted to do so. **DO NOT** operate the transmitter in areas that are sensitive to electromagnetic radiation such as hospitals, aircraft, and blasting sites.

---

# FOREWORD

---

Thank you for purchasing the IC-F30GT/GS, IC-F40GT/GS FM transceiver.

**READ ALL INSTRUCTIONS** carefully and completely before using the transceiver.

**SAVE THIS INSTRUCTION MANUAL**—This instruction manual contains important operating instructions for the transceiver.

---

# INSTALLATION NOTES

---

- When transmitting with a portable radio, hold the radio in a vertical position with its microphone 2.5 to 5 centimeters (1 to 2 in.) away from your mouth. Keep the antenna at least 2.5 centimeters (1 in.) from your head and body.
- If you wear a portable two-way radio on your body, ensure that the antenna is at least 2.5 centimeters (1 in.) from your body when transmitting.

---

# IMPORTANT

---

⚠ **CAUTION! NEVER** hold the transceiver so that the antenna is very close to, or touching exposed parts of the body, especially the face or eyes, while transmitting. The transceiver will perform best if the microphone is 2 to 4 in. (5 to 10 cm) away from the lips and the transceiver is vertical.

⚠ **CAUTION! NEVER** operate the transceiver with a headset or other audio accessories at high volume levels.

⚠ **CAUTION! NEVER** short the terminals of the battery pack.  
**DO NOT** push the PTT when not actually desiring to transmit.

---

**AVOID** using or placing the transceiver in direct sunlight or in areas with temperatures below +14°F (-10°C) or above +122°F (+50°C).

The basic operations, transmission and reception of the transceiver, are guaranteed within the specified operating temperature range (depending on version). However, the LCD display may not be operate correctly, or show an indication in the case of long hours of operation, or after being placed in extremely cold areas.

**DO NOT** modify the transceiver for any reason.

**KEEP** the transceiver from the heavy rain, and **Never** immerse it in the water. The transceiver construction is **water resistant**, not waterproof.

The use of non-Icom battery packs/chargers may impair transceiver performance and invalidate the warranty.



Versions of the IC-F30GT/GS and IC-F40GT/GS which display the “FM APPROVED” symbol as at left on the serial number seal, conform to intrinsically safe ratings of the FMRC (Factory Mutual Research Corporation).

Intrinsically safe : Class I, II, III, Division 1,  
Groups C, D, E, F, G

Nonincendive : Class I, Division 2, Groups A, B, C, D

Connected battery pack : BP-210FM

***FCC caution:*** Changes or modifications to this transceiver, not expressly approved by Icom Inc., could void your authority to operate this transceiver under FCC regulations.

---

# TABLE OF CONTENTS

---


SAFETY TRAINING INFORMATION .....	i-ii
FOREWORD .....	iii
INSTALLATION NOTES .....	iii
IMPORTANT .....	iii-iv
TABLE OF CONTENTS .....	v
<b>1 ACCESSORIES .....</b>	<b>1</b>
<b>2 PANEL DESCRIPTION .....</b>	<b>2-4</b>
■ Switches, controls, keys and connectors .....	2-3
■ Function display .....	4
<b>3 BATTERY PACKS .....</b>	<b>5-10</b>
■ Battery pack replacement .....	5
■ Battery cautions .....	6
■ Battery charging .....	7-8
■ Charging NOTE .....	9
■ Battery case (Option) .....	10
<b>4 PROGRAMMABLE FUNCTIONS .....</b>	<b>11-15</b>
■ General .....	11
<b>5 CONVENTIONAL OPERATION .....</b>	<b>16-18</b>
■ Receiving and transmitting .....	16
■ Call procedure .....	17
■ Tx code channel selection .....	18
■ Manual 5-tone codes .....	18
■ Transmitting notes .....	18
<b>6 SmarTrunk II™ OPERATION .....</b>	<b>19-21</b>
■ Basic operation .....	19
<b>7 OTHER FUNCTIONS .....</b>	<b>22</b>
■ DTMF pager/Code squelch .....	22
■ Cloning .....	22
<b>8 OPTIONAL UNIT INSTALLATION .....</b>	<b>23</b>
■ Installation .....	23
<b>9 OPTIONS .....</b>	<b>24-25</b>

## ■ Accessory attachment

### ◇ Supplied accessories

The transceiver comes supplied with the following accessories.

- ① Flexible antenna (may differ from that shown, or may not be supplied with some versions)




- ② Belt clip



### ◇ Antenna

The antenna screws onto the transceiver as illustrated at right.

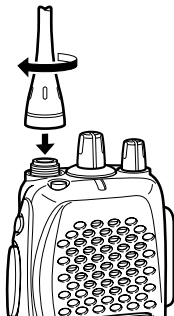


### ✓ For IC-F30GT-L/GS-L

The most suitable flexible antenna **must be purchased separately**, according to the frequency coverage and programmed frequency parameters of each version. See page 25 for details.


### ◇ Belt clip

Attach the belt clip to the transceiver as illustrated below.

To attach the belt clip

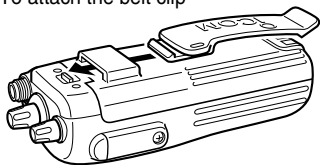


To release the belt clip

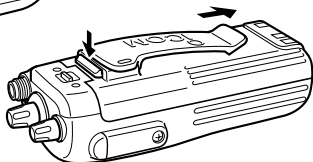



## 2 PANEL DESCRIPTION

### ■ Switches, controls, keys and connectors

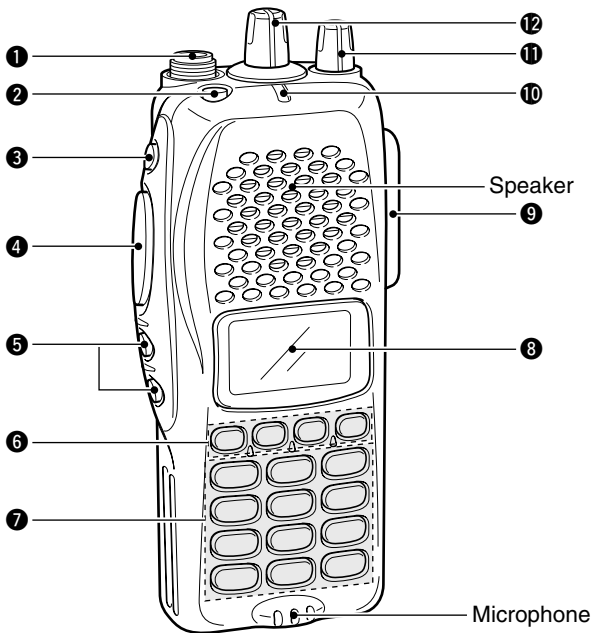

#### ◇ Programmable key reference

F0 (Red)		P0	
F1 (Black)		P1	
F2 (Black)		P2	
F3 (Black)		P3	

**① ANTENNA CONNECTOR**

Connects the supplied antenna.

**② DEALER-PROGRAMMABLE KEY [F0 (Red)]****③ DEALER-PROGRAMMABLE KEY [F1 (Black)]****④ PTT SWITCH [PTT]**

Push and hold to transmit; release to receive.

**⑤ DEALER-PROGRAMMABLE KEYS [F2 (Black)], [F3 (Black)]**

- Push to select the operating channel. Depends on setting.
- Can be programmed as [ \* ]/[ # ]. (SmarTrunk mode only)

**⑥ DEALER-PROGRAMMABLE KEYS [P<sub>0</sub>]/[P<sub>1</sub>]/[P<sub>2</sub>]/[P<sub>3</sub>]**

Can each be programmed for one of several functions by your Icom Dealer.

**⑦ 10-KEY PAD (IC-F30GT/IC-F40GT only)**

Used to enter DTMF codes, the operating channel, etc.

**⑧ FUNCTION DISPLAY**

Displays a variety of information such as, operating channel number/names, 5-tone code, remaining battery power, DTMF numbers, transmit output power setting, Audible indication, etc.

/// **NOTE:** The above functions depend on pre-setting.

**⑨ MULTI CONNECTOR**

Connect optional speaker-microphone, etc.

**⑩ TRANSMIT/BUSY INDICATOR**

Lights red while transmitting; lights green while receiving a signal, or when the squelch is open.


**⑪ VOLUME CONTROL [VOL]**

Turns power ON and adjusts the audio level.

**⑫ ROTARY SELECTOR [SEL]**

Selects operating channel or bank. Depends on setting.

### ■ Function display

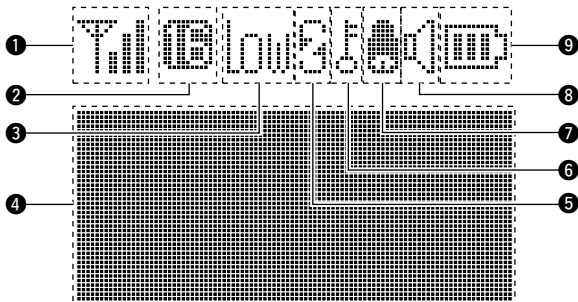

#### ① SIGNAL STRENGTH METER

Indicates relative signal strength level.

#### ② BANK NUMBER INDICATOR

Indicates operating bank (channel group) number.

#### ③ LOW POWER INDICATOR

Appears when low output power is selected.

#### ④ MULTI-FUNCTION INDICATOR

Indicates operating channel number, channel names, 5-tone code, etc., according to operating condition.

#### ⑤ SCRAMBLER INDICATOR

Appears while the voice scrambler function is activated.

#### ⑥ KEY LOCK INDICATOR

Appears during key lock function ON.

#### ⑦ BELL INDICATION

Appears or blinks when a 2/5Tone call is received.

#### ⑧ AUDIBLE INDICATOR

Appears when the monitor function is turned ON. (CTCSS and DTCS mutes are released.)


#### ⑨ BATTERY INDICATOR


Indicates remaining battery power.

## ■ Battery pack replacement

Before replacing the battery pack, the volume control **MUST** be rotated fully counterclockwise, until a click is heard, to turn the power OFF.

- Slide the battery release forward, then pull the battery pack upward with the transceiver facing away from you.

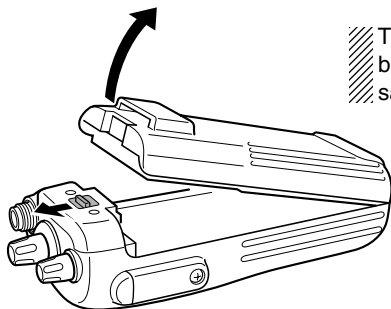

 The BP-210FM only can be used for the intrinsically safe versions.

## ◇ BATTERY PACKS

Battery pack	Voltage	Capacity	Charging period		Battery life* <sup>1</sup>
			BC-137	BC-119N or BC-121N with AD-101	
BP-208	Battery case for AA (R6)×6 alkaline		N/A	N/A	—* <sup>2</sup>
BP-209	7.2 V	1100 mAh	15 hrs.	1.5 hrs.	7 hrs.
BP-210/FM	7.2 V	1650 mAh	15 hrs.	2.0 hrs.	11 hrs
BP-211	7.4 V	1800 mAh	N/A	2.0 hrs.	12 hrs

\*<sup>1</sup>Battery life is calculated under the following conditions;

Tx : Rx : standby =5 : 5 : 90

\*<sup>2</sup>Operating period depends on alkaline cells used.

## ■ Battery cautions

- **CAUTION! NEVER** short terminals (or charging terminals) of the battery pack. Also, current may flow into nearby metal objects such as a necklace, so be careful when placing battery packs (or the transceiver) in handbags, etc.  
Simply carrying with or placing near metal objects such as a necklace, etc. causes shorting. This will damage not only the battery pack, but also the transceiver.
- **NEVER** incinerate used battery packs. Internal battery gas may cause an explosion.
- **NEVER** immerse the battery pack in water. If the battery pack becomes wet, be sure to wipe it dry **BEFORE** attaching it to the transceiver.
- **Clean** the battery terminals to avoid rust or miss contact.
- **Keep** battery contacts clean. It's a good idea to clean battery terminals once a week.

If your battery pack seems to have no capacity even after being charged, completely discharge it by leaving the power ON overnight. Then, fully charge the battery pack again. If the battery pack still does not retain a charge (or only very little charge), a new battery pack must be purchased. (p. 9)

#### ◇ Recycling information (U.S.A. only)



The product that you have purchased contains a rechargeable battery. The battery is recyclable. At the end of its life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream. Call 1-800-822-8837 for battery recycling options in your area, or contact your dealer.

## ■ Battery charging


### ◇ Rapid charging with the BC-119N

The optional BC-119N provides rapid charging of optional Ni-Cd, Ni-MH and Li-Ion battery packs.


The following are additionally required:

- One AD-101 (purchase separately).
- An AC adapter (may be supplied with the BC-119N depending on version).

Turn power  
OFF.




Check orientation  
for correct charging.  
(Insert together with  
charging adapter.)

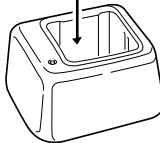

BC-119N  
+ AD-101

When using the BC-119 in a vehicle: If the charge indicator flashes orange, the vehicle battery voltage is low and charging may not be performed. Check the vehicle battery voltage in this case. If the charge indicator flashes red, there may be a problem with the battery pack (or charger). Re-insert the battery pack or contact your dealer.

### AD-99— Use Spacer A only!

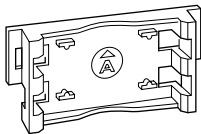


The adapter (Spacer A) only is required for charging a battery pack with the IC-F30G series transceiver.

### 3 BATTERY PACKS

#### ◇ Rapid charging with the BC-121N+AD-101

The optional BC-121N allows up to 6 battery packs to be charged simultaneously. The following are additionally required.

- Six AD-101.
- An AC adapter (BC-124; must be purchased separately).

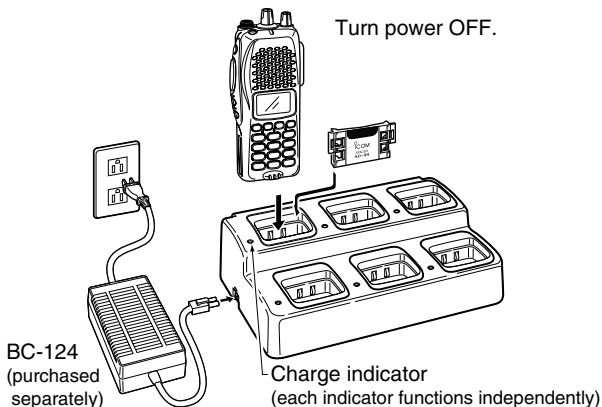


#### ◇ Regular charging with the BC-137 #11/BC-146

The optional BC-137 #11 or BC-146 provides regular charging of optional battery pack with/without transceiver. The following is additionally required:

- An optional AC adapter.  
(AD-99 is supplied with BC-137 #11/BC-146)

Turn power OFF.

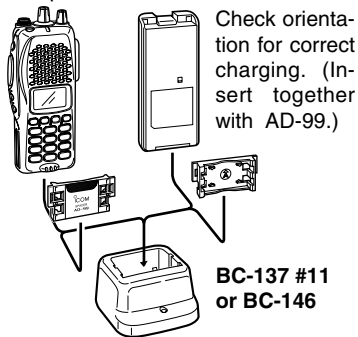

## ■ Charging NOTE

Prior to using the transceiver for the first time, the battery pack must be fully charged for optimum life and operation.

- Recommended temperature range for charging:  
+10°C to +40°C (50°F to 140°F).
- Use the supplied charger or optional charger, BC-119N/BC-121N for rapid charging BP-209/210/210FM/211, BC-144 for rapid charging BP-209/210/210FM, BC-137 #11/BC-146 for regular charging BP-209/210/210FM only. **NEVER** use other manufacturers' chargers.

The optional BP-209, BP-210/FM or BP-211 battery packs include rechargeable Ni-Cd (Ni-MH: BP-210/FM, Li-Ion: BP-211) batteries and can be charged approx. 300 times. Charge the battery pack before first operating the transceiver or when the battery pack becomes exhausted.

If you want to charge the battery pack more than 300 times, the following points should be observed:

- Avoid over charging. The charging period should be less than 48 hours.
- Use the Ni-Cd or Ni-MH battery until it becomes almost completely exhausted under normal conditions. We recommend battery charging after transmitting becomes impossible.

### Recommendation for Li-Ion battery packs:

Li-Ion batteries are different from Ni-Cd batteries in that it is not necessary to completely charge and discharge them to prolong the battery life. Therefore, charging the battery in intervals, and not for extended periods is recommended.


### ◇ Battery pack life

When the operating period becomes extremely short, even after charging the battery pack fully, a new battery pack is needed.



## ■ Battery case (Option)

When using an optional BP-208 BATTERY CASE attached to the transceiver, install 6 AA (R6) size alkaline batteries as illustrated below.

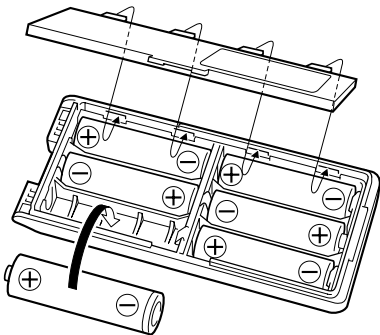

### ◆ CAUTION

- Use **ALKALINE** batteries only.
- **Make sure** all battery cells are the same brand, type and capacity.
- **Never** mix old and new batteries.

Either of the above may cause a fire hazard or damage the transceiver if ignored.

- **Never** incinerate used battery cells since internal battery gas may cause them to rupture.
  - **Never** expose a detached battery case to water.
- If the battery case gets wet, be sure to wipe it dry before use.


## ■ General

In the following explanations, programmable function names are bracketed, the specific switch used to activate the function depends on programming.

### ◇ KEYPAD LOCK FUNCTION

This function locks access to all programmable switches (except the switch assigned for the lock function).

Push and hold the [Lock] switch for 1 sec. to toggle the lock function ON and OFF.

- “” appears while the lock function is ON.
- This function may be inhibited on some channels.

### ◇ PRIORITY CHANNEL

This function is used to select a pre-programmed channel at the push of a switch.

Push the [Priority A/A (Rewrite)/B] switch to select the priority channel.

- “Prio A” or “Prio B” appears briefly, then the priority channel is automatically selected.

### ◇ SCAN FUNCTION

The scan function allows you to search a pre-programmed group of channels for signals.

Push the [Scan A/B] switch to start/stop scan.

- Scan pauses on a channel when receiving a signal.
- Depending on programming, a message may appear while scanning.
- “Lockout SCAN” (pre-programmed list SCAN) or “Priority SCAN” can be pre-programmed.
- When the “Power-save function” is activated, the transceiver checks all pre-programmed channels then returns to the “Power-save function” again.


---

## 4 PROGRAMMABLE FUNCTIONS

### ◇ HIGH/LOW POWER OUTPUT

This function selects high or low power for a channel.

Push the [High/Low] switch to change transmit output power between high, low1 and low2 power.

- “” appears when low1 or low2 output power is selected.

### ◇ SCRAMBLER FUNCTION


(optional UT-109 (#02)\* or UT-110 (#02)\* is required.)

This function provides higher communication security.

UT-109: Non-rolling type. 32 code numbers are available.


UT-110: Rolling type. 1020 (4 groups × 255) code numbers are available.

Push the [Scrambler] switch to toggle the function ON and OFF.

 **NOTE: NEVER use #01** Low AF level versions, as they are not compatible

## ◇ MONITOR AUDIBLE FUNCTION

The monitor function allows you to open the transceiver's squelch manually to check whether a channel is busy or not. The transceiver has 2 conditions for receive standby:

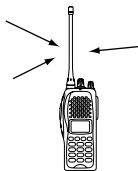

All signals are received.



Only signals containing the proper tone are received.

### Audible condition:

This condition mutes audio **ONLY** when no carrier is present. You can receive (or monitor) any signals on a channel.

- Push and hold the [Moni] (LMR) or [Moni (Audi)] (PMR) switch to select the audible condition.

Any audio mute functions are cancelled while pushing the [Moni] (LMR) or [Moni (Audi)] (PMR) switch.

### Inaudible condition:

This condition mutes **ALL** signals except those directed to you. Therefore you should check a channel's condition (busy or not) with the monitor function before transmitting.

- Push the [Moni] (LMR) or [Moni (Audi)] (PMR) switch momentarily to select the inaudible condition.

## ◇ TALK AROUND

The talk around function changes duplex channels to simplex channels.

- **Duplex** allows you to contact your base station, repeaters, etc.
- **Simplex** allows you to contact other portable transceivers directly (portable-to-portable contact).

Push the [Talk Around] switch to toggle the function ON and OFF.

---

## 4 PROGRAMMABLE FUNCTIONS

### ◆ DTMF TRANSMISSION

This function allows you to send a pre-programmed DTMF code to control a repeater, open another transceiver's squelch, etc.

#### **Manual transmission:**

Push the desired digit keys in sequence while pushing [PTT].

- Pushing [PTT] may not be necessary depending on programming.

#### **Automatic pre-programmed transmission:**

- ① Push the [DTMF Autodial] switch to select DTMF autodial mode, then push [CH Up] or [CH Down] to select the desired channel.
- ② Push the [DTMF Autodial] switch to send a DTMF code.

### ◆ DTMF RE-DIAL FUNCTION

This function allows you to transmit the last-used DTMF code at the push of a key.

Push the [Re-dial] switch momentarily to activate the function.

- The previously transmitted DTMF code is automatically transmitted.
- If no code has been transmitted since turning the power ON, this function does not activate.

### ◆ EMERGENCY FUNCTION

The emergency function allows you to send an emergency signal quickly and easily to your Base Station, etc. in case of emergency.

Push and hold the [Emergency Single/Repeat] switch for 1 sec. to activate the emergency function.

- The transceiver selects a pre-programmed channel, then sends an emergency signal to your Base Station.
- The pre-programmed channel remains selected until a control signal is received from the Base Station, or power is turned OFF.
- The emergency call is repeatedly transmitted at pre-programmed intervals.

**◇ DISPLAY LIGHTING**

The function display has 3 backlight conditions.

**ON** : Backlight turns ON continuously.

**OFF** : No backlight is available.

**AUTO** : When any key, except [PTT], is pushed, the backlight turns ON for 5 sec. automatically.

**◇ SmarTrunk II™ functions**

This transceiver provides SmarTrunk II™ functions.


(Optional UT-105 SmarTrunk II™ Logic Board is required.)

The optional UT-105 allows communication over conventional channels or SmarTrunk II™ channels. Select a channel bank for SmarTrunk II™ before trunking operation.

To toggle SmarTrunk II™ channels and conventional channels, push the [Bank] switch one or more times.

- Scanning starts when a channel bank for SmarTrunk II™ is selected.
- Contact your dealer for channel bank details.  
(See p. 19 for more detailed operation.)

## ■ Receiving and transmitting

-  **NOTE:** Transmitting without an antenna may damage the transceiver. See p. 1 for antenna attachment.  
Turn power ON as described on p. 3.

Receiving:

- ① Push [CH Up]/[CH Down], or rotate [SEL] to select a channel.
- ② Listen for a transmission and adjust [VOL] to a comfortable listening level.
  - When no transmission is heard, push and hold monitor while adjusting [VOL] (your transceiver may not be programmed with the monitor function).

The transceiver is now set to receive desired calls on the selected channel.

Transmitting:

Wait for the channel to become clear to avoid interference.

- ③ While pushing and holding [PTT], speak into the microphone at a normal voice level.
  - When a tone signalling system is used, the call procedure described at right may be necessary.
- ④ Release [PTT] to return to receive.


**IMPORTANT:** To maximize the readability of your transmitted signal, pause a few seconds. After pushing [PTT], hold the microphone 2 to 4 in. (5 to 10 cm) from your mouth and speak at a normal voice level.

## ■ Call procedure


When your system employs tone signalling (excluding CTCSS and DTCS), the call procedure may be necessary prior to voice transmission. The tone signalling employed may be a selective calling system which allows you to call specific station(s) only and prevent unwanted stations from contacting you.

- ① Select the desired Tx code channel or 5-tone code according to your System Operator's instructions.
  - This may not be necessary depending on programming.
  - Refer to the next page for selection.
- ② Push the call switch (assigned to one of the dealer programmable switches: [P<sub>0</sub>], [P<sub>1</sub>], [P<sub>2</sub>], [P<sub>3</sub>], [F2] and [F3]).
- ③ After transmitting a 5-tone code, the remainder of your communication can be carried out in the normal fashion.

*Selective calling*

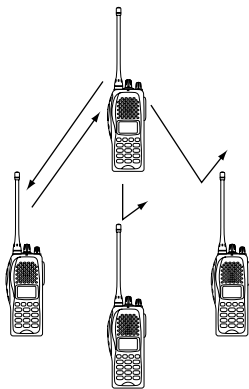

*Non-selective calling*

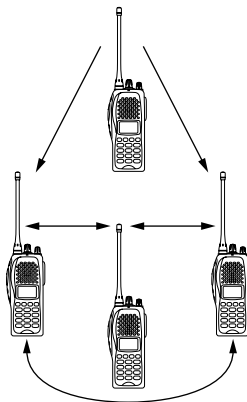



### ■ Tx code channel selection

Your radio may be programmed for Tx code channel selection. In this case, you can choose a Tx code channel to be transmitted when using the call function (p. 17).

Push [Tx Code CH Up/Down] (assigned to one of the dealer-programmable switches) to select the desired Tx code channel.

- The selected code channel (containing a pre-programmed 5-tone code) is transmitted when using the call function.

### ■ Manual 5-tone codes

Depending on programming, you may be able to send 5-tone codes manually.

Push [Tx Code] to activate the function, then enter the desired transmit code (up to 7 digits) using the keypad.

- Activate the call function to transmit the 5-tone code.
- Blinking indicates keypad entry is acceptable.

### ■ Transmitting notes

#### ◇ TIME-OUT TIMER

After continuous transmission for a pre-programmed period, the time-out timer is activated, causing the transceiver to stop transmitting.

#### ◇ PENALTY TIMER

Once the time-out timer is activated, transmission is further inhibited for a period determined by the penalty timer.

## ■ Basic operation

These features are enabled by your Dealer or System operator and may not be available in your system. Contact your Dealer for details.

Push the [Bank] switch one or more times to select a channel bank for conventional channels or SmarTrunk II™ channels.

- Scanning starts when a channel bank for SmarTrunk II™ is selected.

### ◇ PTT dispatch operation\*<sup>1</sup>

- ① Push [PTT] once (without dialling) to initiate a dispatch call.
  - ② Begin talking after you hear three beeps (one short, high-pitched, two very-short, low-pitched).
  - ③ Receiving a dispatch call is indicated by the same three-beep sequence.
- It is not necessary to push [\*] to answer a dispatch call.

### ◇ System busy indication

If all channels are busy, three low beeps sound after you initiate a call. Try the call again later.

### ◇ Receiving a subscriber-to-subscriber call\*<sup>1</sup>

When you hear ringing, push [\*] to answer.

- For a group call, you hear a short ring followed by two short beeps. You do not have to answer a group call to hear it over the air.

### ◇ Receiving a landline-to-subscriber call\*<sup>1</sup>

When you hear ringing, push [\*] to answer.

- For a group call, you hear a short ring followed by two short beeps. You do not have to answer a group call to hear it over the air.

### ◇ Terminating a call\*<sup>1</sup>

After completing a call, push [#] to disconnect (hang up).

**IMPORTANT:** If one person in the conversation terminates a call, all participants will be cut off.

---

## 6 SmarTrunk II™ OPERATION

### ◆ Last number redial\*<sup>1</sup>

Push [\*], [\*] to automatically redial the last number called.

- A high-pitched beep indicates that the number is accepted.

### ◆ Turbo Speedial

To automatically dial a commonly used number with one push:


- Push one of the turbo Speedial keys.

### ◆ Programming memory speed dial

① Push and hold [\*] until you hear a high-pitched beep.

② Enter the memory location (0–9, A, B, C, D), the telephone or subscriber number, then [1], [\*] (or [3], [\*] if for another system subscriber).

- A high-pitched beep indicates successful programming.
- Memories [A]–[D] are used for the Turbo Speedial.

 **NOTE:** This function is available for the IC-F30GT/IC-F40GT only.

### ◆ Memory speed-dialling\*<sup>2</sup>

To automatically dial a commonly used number from memory:

- Push [\*] followed by the memory location (0–9).

### ◆ Clear channel alerting\*<sup>1</sup>

If all channels are busy, the transceiver automatically begins searching for an open channel and beeps every ten seconds. When two short beeps (low-pitched, then high-pitched) are heard, a channel is available. Push [\*], [\*] immediately to redial the last number.

### ◆ Emergency call\*<sup>2</sup>

Push [0], [\*] to initiate an emergency call.

- Contact your Dealer for details.

**◇ Placing a telephone call\*2**

Enter the phone number followed by [1], [\*].

- A high-pitched beep indicates that the number is accepted.
- When the called party answers, push the [PTT] switch to talk, and release it to listen.

**◇ Calling another local system subscriber\*2**

Enter the subscriber number followed by [3], [\*].

- A high-pitched beep indicates that the number is accepted.
- You hear ringing, then two short beeps when the subscriber answers.
- If the other subscriber is on another call or out of range, you hear a fast busy signal and the call terminates automatically.

\*1: This function is available for the IC-F30GS/IC-F40GS when the [F2]/[F3] keys are assigned the [\*]/[#] key functions.

\*2: This function is available for the IC-F30GT/IC-F40GT only.  
Use the Turbo Speedial function instead.


**For additional operating instructions, contact your Dealer or System Operator.**

# 7 OTHER FUNCTIONS

## ■ DTMF PAGER/CODE SQUELCH

### ◇ DTMF pager

This function uses DTMF tones for calling and can be used as a “common pager” to inform you that one of your group has called even if the operator is temporarily away from the transceiver.

- When the connection code is received, a beep sounds, then “” flashes and shows the called station’s code number.
- The called station’s code number is memorized automatically, and is easy to re-call with “ID-MR select function”.

### ◇ Code squelch

This conveniently eliminates unwanted audio and is useful in group activities or security related activities where unwanted output can be a problem. The function is similar to a CTCSS tone squelch.

In order to use the above functions, cloning is necessary via a PC using the optional CS-F30G CLONING SOFTWARE. Using this software, the transceiver’s model, individual RX Code CH, TX Code CH, Special Tone Link2 (must be ‘E’) in 5Tone screen, 5Tone Signaling Form in Memory-CH screen, Log, RX C-No, Key&Display, Common Auto Reset Timer B, and other settings related to operation can be set. Refer to the HELP file that comes with the CS-F30G CLONING SOFTWARE for available settings.

## ■ Cloning

Cloning allows you to quickly and easily transfer the programmed contents or data from PC to a transceiver using the optional CS-F30G CLONING SOFTWARE.

### ◇ PC-to-transceiver cloning

Please refer to the HELP file that comes with the CS-F30G CLONING SOFTWARE.

**CAUTION:** Imprudent cloning operation causes a cloning error. In such a case, memory contents may be lost. Cloning must then be repeated.


# OPTIONAL UNIT INSTALLATION 8

You can install two of the following optional units in the transceiver. UT-105 SmarTrunk II™ Logic Board, UT-109/UT-110 VOICE SCRAMBLER UNIT, UT-111 TRUNKING BOARD, UT-113 MAN DOWN UNIT.

## ■ Installation


- ① Unscrew nut (a), and remove the knobs.
- ② Unscrew screw (b), 2 screws (c) then remove multi-connector cover and rear panel.
- ③ Unscrew 2 screws (d), then remove multi-connector.
- ④ Unscrew 2 screws (e) then separate the chassis from the front panel in the direction of the arrow.

**Be careful!** A flat cable is connected between the MAIN unit on the chassis and front panel.

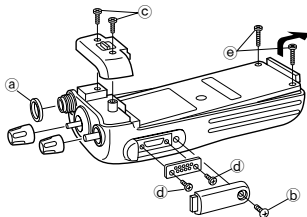

- ⑤ Install the desired optional unit. Insert tightly to avoid bad contact.

**NOTE:** When installing UT-105 or UT-111, the unit **MUST BE** plugged into **SLOT 1**. Otherwise the unit will not work correctly. (Other optional units can be plugged into either slot.)

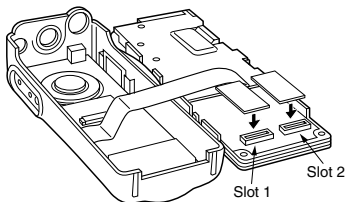

- ⑥ Program the necessary information with the cloning software before operation. Please ask your dealer or system operator for details.

# 9 OPTIONS

## ◇ BATTERY PACKS/CASE

### • **BP-208** BATTERY CASE

Allows a set of Alkaline batteries to operate the handheld when charging rechargeable batteries or in emergencies, etc. 6 AA (R6) alkaline cells are required.

### • **BP-209** Ni-Cd BATTERY PACK

7.2 V/1100 mAh Ni-Cd battery pack, allows more than 7 hours operation.

### • **BP-210/FM** Ni-MH BATTERY PACK

7.2 V/1650 mAh Ni-MH battery pack, allows approx. 11 hours operation. BP-210FM for the intrinsically safe type.

### • **BP-211** Li-Ion BATTERY PACK

7.4 V/1800 mAh Li-Ion battery pack, allows approx. 12 hours operation.

## ◇ CHARGER

### • **BC-119N** DESKTOP CHARGER + **AD-101** CHARGER ADAPTOR

For rapid charging of battery packs. An AC adapter may supplied with the charger. Charging time: 1.5 to 2 hrs.

### • **BC-121N** MULTI-CHARGER + **AD-101** CHARGER ADAPTOR (6 pcs.)

For rapid charging of up to 6 battery packs (six AD-101's are required) simultaneously. An AC adapter, BC-124 must be purchased separately. Charging time: 1.5 to 2 hrs.

### • **BC-144** DESKTOP CHARGER + **BC-145** AC ADAPTOR

For rapid charging of battery packs (except BP-211). An AC adapter may be supplied with the charger. Charging time: 1.5 to 2 hrs. (approx.)

### • **BC-137 (#11)** BATTERY CHARGER + **BC-122** AC ADAPTOR

For regular charging of battery packs (except BP-211). An AC adapter is additionally required. Charging time: 15 hrs. (approx.)

### • **BC-146** BATTERY CHARGER + **BC-147** AC ADAPTOR

For regular charging of battery packs (except BP-211). An AC adapter is additionally required. Charging time: up to 17.5 hrs.

## ◇ INTERNAL UNITS

### • **UT-105** SmarTrunk II™ Logic Board

Provides SmarTrunk II™ capabilities.

- **UT-109 (#02)/UT-110 (#02)** SCRAMBLER UNITS  
Non-rolling type (UT-109)/Rolling type (UT-110) voice scrambler unit provides higher communication security.
- **UT-111** TRUNKING BOARD  
Provides LTR® trunking capabilities.
- **UT-113** MAN DOWN UNIT  
Provides a measure of safety when working in a hazardous environment, etc.

### ◇ OTHER OPTIONS

- **AD-52** EARPHONE JACK ADAPTER  
Allows you to connect an earphone, 2-conductor 3.5 (d) mm (1/8").
- **AD-98FSC** ANTENNA CONNECTOR CONVERTER  
Allows you to connect an external antenna with BNC connector.
- **EM-80/EM-89/HM-131SC** SPEAKER-MICROPHONES  
Combination speaker-microphone that provides convenient operation while hanging the transceiver from your belt.
- **FA-SC10L/FA-SC11L/FA-SC12L/FA-SC13L** FLEXIBLE ANTENNAS  
FA-SC10L: 50–58 MHz      FA-SC11L: 58–66 MHz  
FA-SC12L: 66–76 MHz      FA-SC13L: 76–88 MHz
- **FA-SC56VS/FA-SC57VS/FA-SC73US** STUBBY ANTENNAS  
Shorter VHF or UHF antennas.  
FA-SC56VS: 150–162 MHz      FA-SC57VS: 160–174 MHz  
FA-SC73US: 450–490 MHz
- **HS-94** HEADSET + **VS-1SC** VOX/PTT CASE  
Ear-piece type headset and VOX/PTT switch box for hands-free operation, etc. PC programming may be required for the IC-F30G series transceivers to enable the VOX operation.
- **MB-68/MB-74/MB-87** BELT CLIPS  
MB-68: Same as that supplied with the transceiver.  
MB-74: Exclusive alligator-type belt clip.  
MB-87: Swivel belt clip.



**Count on us!**



A-5668H-1EX-④  
Printed in Japan  
© 2000 Icom Inc.

**Icom Inc.**  
1-1-32 Kamiminami, Hirano-ku, Osaka 547-0003 Japan